

#8023 Child Bungee Cord

For children aged 12 and under.



Do not use this item outside of the inflatable Bungee Run game.

The Child Bungee Cord should only be used with our Child Harness and an H-Frame.

Do not use the Child Bungee Cord with carabiners or any kind of buckles.

Make sure to replace your bungee cords on time. Bungee cords should be replaced when they start becoming worn down or ripping from use.

See images below to learn how to properly attach Child Bungee Cord (Harness, H-Frame sold separately).



Please email nbmoonwalks@yahoo.com or visit www.nbmoonwalks.com for more information.